

# DATASHEET

## INTELLIGENT (CATEGORY P) HEAT DETECTOR

### A3500L

The A3500L Intelligent Heat Detector is a point detection device that continuously samples for temperature variation in the protected area to provide the earliest warning of a fire condition in areas where traditional smoke detection products are not suitable. This detector forms part of the Altair range of aesthetically pleasing low profile detection and alarm products and is fully compatible\* with all fire control equipment utilising the Argus fully digital communication protocol.



\*For BASE COMPATIBILITY see page 2

### KEY FEATURES


- Multiple fully approved sensitivity settings
- Utilises fully digital Argus protocol with high noise rejection
- Dual alarm LEDs providing 360° cone of visibility
- Open style mounting base offers easy wiring and low pressure locking
- Programmable using the Device Programming Tool
- 5 year product warranty

### TECHNICAL SPECIFICATION

Loop voltage	15Vdc – 40Vdc *
Average standby current	85µA @ 24Vdc
Remote Output Max Current	20mA
Dimensions (inc. base)	110mm x 60mm
Temperature Range (no icing)	-30 °C to +70 °C
Max tolerated humidity (non condensing)	95% RH
Max number of loop addresses	240
Weight (standard base included)	130 g

\*Minimum 18V with LED operation

### TECHNICAL INFORMATION

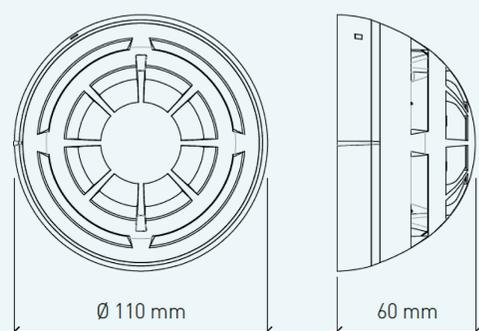

### STANDARDS & APPROVALS

- EN 54-5: Heat Detectors - Point Detectors



# DATASHEET

## INTELLIGENT (CATEGORY P) HEAT DETECTOR

A3500L

### LED INDICATORS

The detector is equipped with two LEDs mounted to give 360 degree visibility. These indicators display device status and condition\*:

NOTE : The LED indicators are managed directly by the fire control panel and the Red (blinking) can be disabled by the installer at the fire control panel or via the hand-held programming unit.


\* All functionality may not be available on all control equipment

### REMOTE OUTPUT CAPABILITY

A remote output capability is available as a standard feature on this device. This allows the connection of a Remote Indicator Module or a compatible Platform Sounder (check power requirements) to be connected to the detector base terminals and controlled from the fire alarm control panel.

NOTE: If other equipment is connected to the remote output, its supply current must be limited by using an adequate resistor. Consult the TECHNICAL SPECIFICATIONS and assess the external device current absorption value. Ensure correct cable polarity.

- **Red:** Normal operational status (blinking)
- **Red:** Detector in an alarm condition

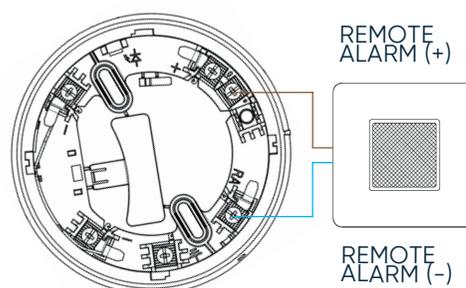

### INSTALLATION - WIRING

The detector must be mounted on a compatible detector base and all analogue loop wiring must be correctly terminated as shown:

- Connections to the detector base terminals are polarity sensitive.
- Care should be taken to ensure correct cable polarity.

### BASE COMPATIBILITY

This device is compatible with the following Argus bases and base sounders:

<b>LAB 1000</b>	Intelligent Base
<b>ALBLS100-32</b>	Intelligent Addressable Base Sounder
<b>ALBLS100-32/AV</b>	Intelligent Addressable Base Sounder VAD

